





# Reset “Spray Pulse Frequency”

Viper XPT-6000

1. Power on the Viper.
2. Click the Menu tab on the main screen
3. Touch the lock icon on the lower left hand corner of the menu screen.

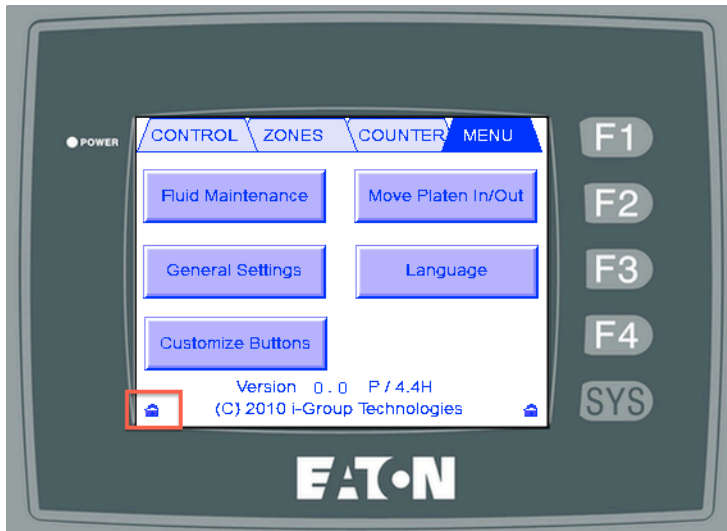

4. Enter the password: **47394739**
5. Touch the box on the “Set Spray Pulses” line.

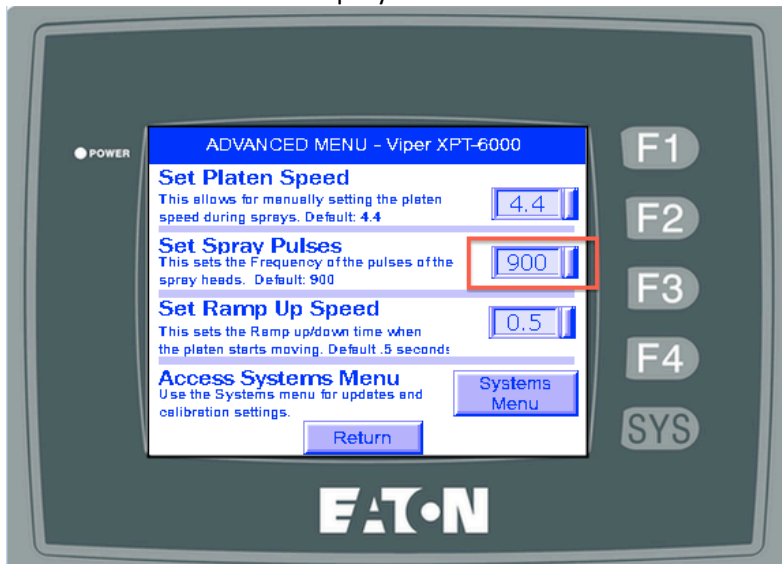

6. Set this value to **900** and touch Enter.
7. Press the Return button to return to the menu. Resume normal operation.

NOTE: If the user has a dead HMI battery, this procedure must be performed every time the Viper is powered on until the battery is replaced.

NOTE 2: This problem is corrected on machines shipped after September 1, 2011.