

## Resetting the HMI after leading dongle

- With the ELC to (run) and the machine is on
- Press the MENU button
- On the bottom left corner of the screen there should be a lock icon. Press the icon
- Enter 12471848
- This will bring up another screen. You want to reset everything to default and go back to the menu.
- At the menu screen find Spray start point
- Reset to default.