



# BAR CODE SCANNING WORKSHEET

## HOW TO SETUP SPRAY AMOUNT & LOCATION BAR CODES FOR THE VIPER MAXX

To set both the location and the spray amount you will need to create a bar code OR send via the USB cable a data string with the following information. We have broken it down below for easier clarification. For BOTH location and Spray Amount it is a 24 digit number. To execute the command a <CR> is applied (this is done automatically in most bar code scanners).



20g Laydown  
14.5"x15"



555014501500000005500600

XXXXXXX	XXXXXXX	XXXXXXX	XXXXXXX	XXXXXXX	XXXXXXX
SPRAY AMOUNT LAYDOWN i.e. 55.50% = 5550	X-WIDTH 14.5" = 1450	Y-WIDTH 15.0" = 1500	AUTO CENTER 0000 = OFF 0001 = ON	X-ORIGIN START INCHES FROM LEFT POSITION 5.5" = 0550	Y-ORIGIN START INCHES FROM START POSITION 6.0" = 0600

ACCORDING TO THE ABOVE EXAMPLE YOU GET THE FOLLOWING:

555014501500000005500600

Non-Auto Centered

## SPRAY PERCENTAGE ONLY

To set both the spray amount you will need to create a bar code OR send via the USB cable a data string with the following information. The format is simple. SXXX. The MAXX will see the SXXX to indicate it is ONLY a spray. The Value XXX is the amount of laydown percentage minus the decimal (in 3 digit form - XX.X). To execute the command a <CR> is applied (this is done



15g

33% Lay Down

SXXX

SPRAY INDICATOR      AMOUNT OF LAYDOWN %  
33.0% = 3300

ACCORDING TO THE ABOVE EXAMPLE YOU GET THE FOLLOWING:

S330

## AUTO START SPRAY

You can tell the Viper MAXX to START spraying simply by sending the characters GOGO via the USB interface.



GOGO - SPRAY

XXXX

SET THE ABOVE XXX TO BELOW TO START SPRAY:

GOGO

## SPRAY LOCATION ONLY

To set Spray Location only you will need to create a bar code OR send via the USB cable a data string with the following information. The format is simple. LOCAXXXXXXXXXXXXXXXXXXXX. The MAXX will see the LOCA to indicate it is ONLY a Location area being applied. To execute the command a <CR> is applied (this is done automatically in most bar code scanners).



6"x6" Left Chest



LOCAXXXXXXXXXXXXXXXXXXXX

SPRAY LOCATION INDICATOR	X-WIDTH 6.0" = 0600	Y-WIDTH 6.0" = 0600	AUTO CENTER 0000 = OFF 0001 = ON	X-ORIGIN START INCHES FROM LEFT POSITION 13.5" = 1350	Y-ORIGIN START INCHES FROM START POSITION 0.0" = 0000
--------------------------	------------------------	------------------------	--	--	--

ACCORDING TO THE ABOVE EXAMPLE YOU GET THE FOLLOWING:

LOCA06000600000013500000