




# BAR CODE PRETREATMENT STEP TEST WORKSHEET

## INSTRUCTIONS:

Start by selecting and loading your shirt onto the VIPER MAXX. Then scan STEP 1 and either press the START button or scan the SCAN TO SPRAY QR code. Use a SILVER Sharpie marker to mark the edge of each SPRAY width so you can visually tell where each STEP starts and stops. Repeat the STEP 1 process for each of the 6 STEPS (STEP 2-6). Then heat cure your pretreatment as normal, then select your print settings. Print a WHITE bar that fits the width of your platen (Approx 40cm wide).

The correct amount of pretreatment for this particular garment is the point between each step where there is not longer a visible difference in the opacity of the white ink.

SCAN TO SPRAY

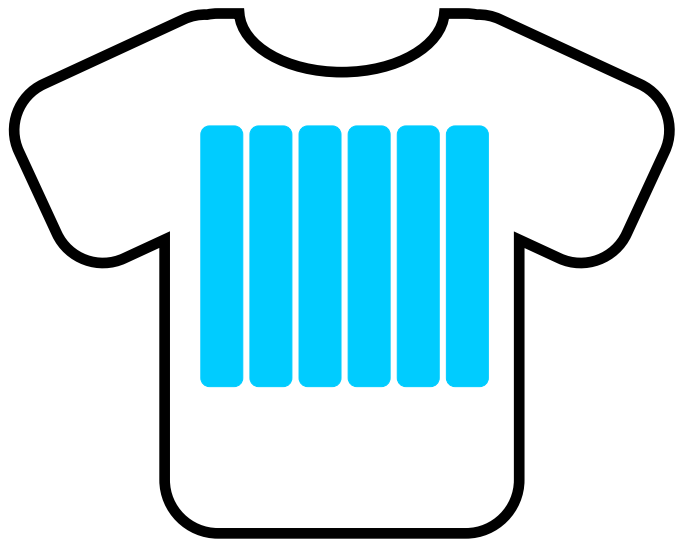

STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6
11g	15g	20g	25g	30g	35g
0% Lay Down	33% Lay Down	53% Lay Down	68% Lay Down	78% Lay Down	84% Lay Down

**THIS PAGE IS DESIGNED FOR METRIC MEASUREMENTS**

Visit [www.viperxpt.com](http://www.viperxpt.com) to learn more on the format required for bar codes.